


Setting constant voltage mode on a Ginlong Solis inverter


Press escape to reach the top-level menu



Press DOWN, 3 times, to reach Advanced Settings and press enter

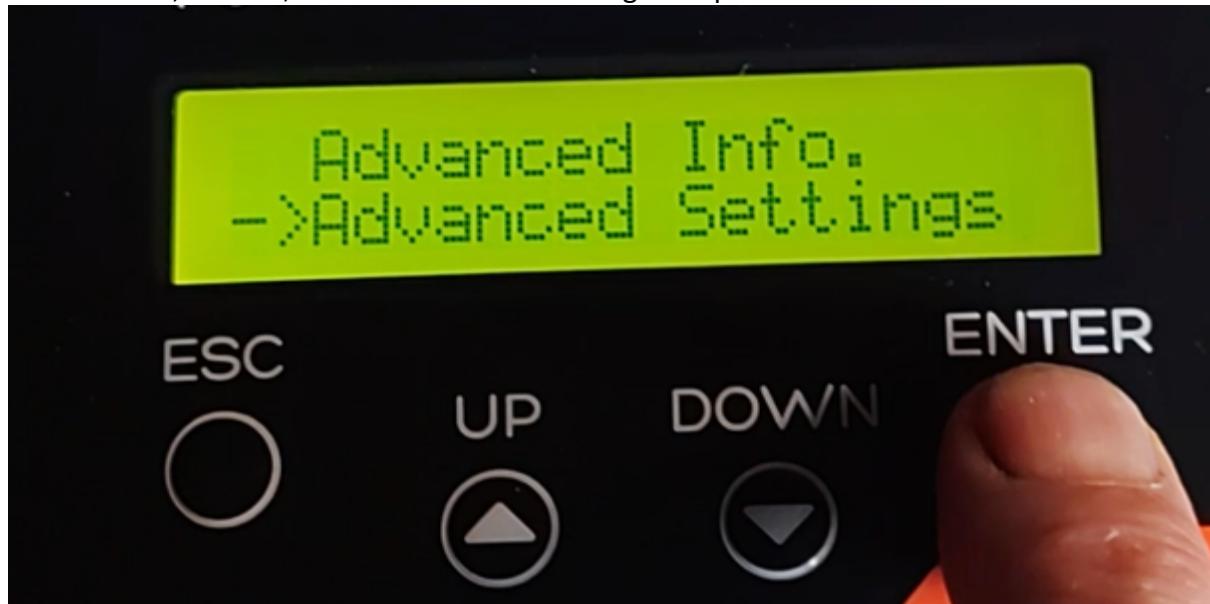


The “password” is 0010 and so you press down 3 times to reach the third digit and press up to set this digit to 1

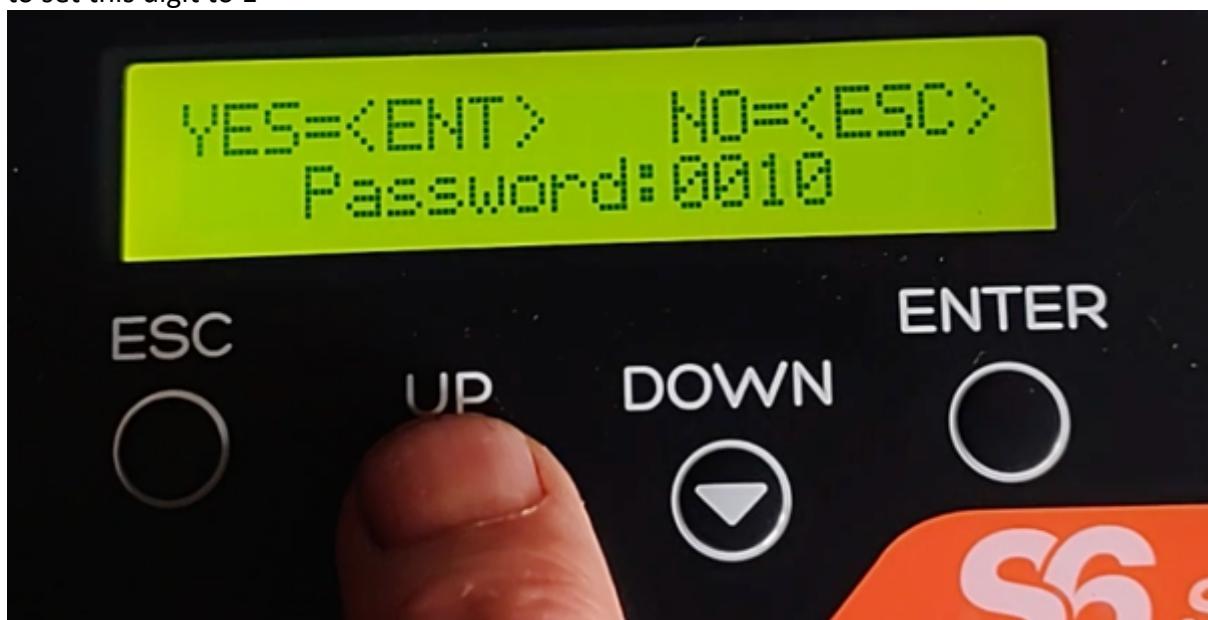

Now you can press ENTER to reach the advanced settings menu top level



Press DOWN 7 times to reach the “Special Settings” menu and press ENTER

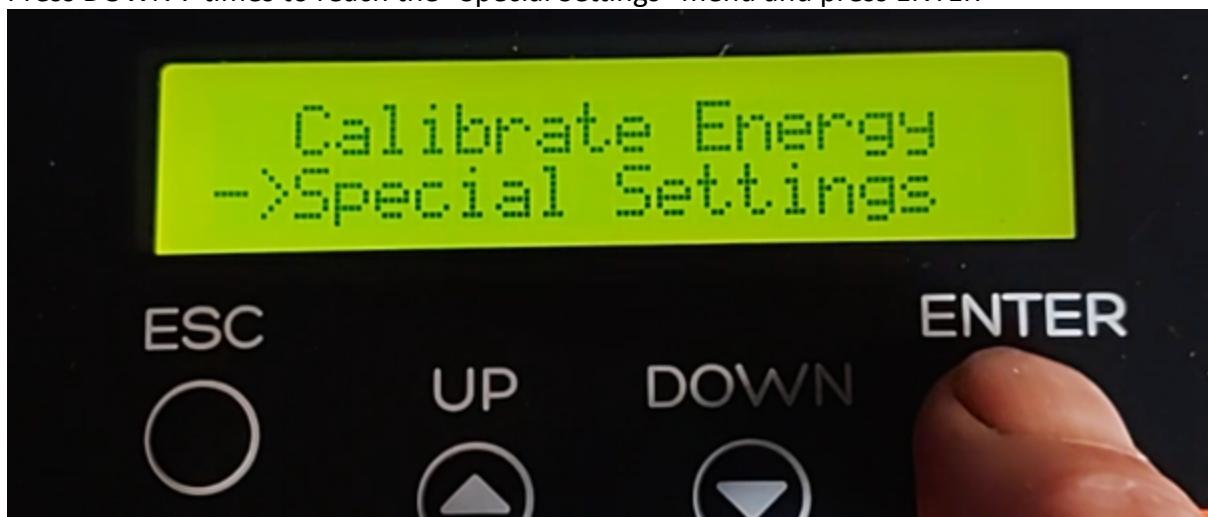

Press down 6 times to reach the “Cnst. Voltage mode” menu and press ENTER




Press DOWN once to reach the line Set Voltage and then use the UP and DOWN keys to select a voltage and press ESC to set that choice.



Press UP to return to the top line, set this to “RUN” and press ESC again to confirm the settings.

Press ENTER to save and send the settings to the inverter.

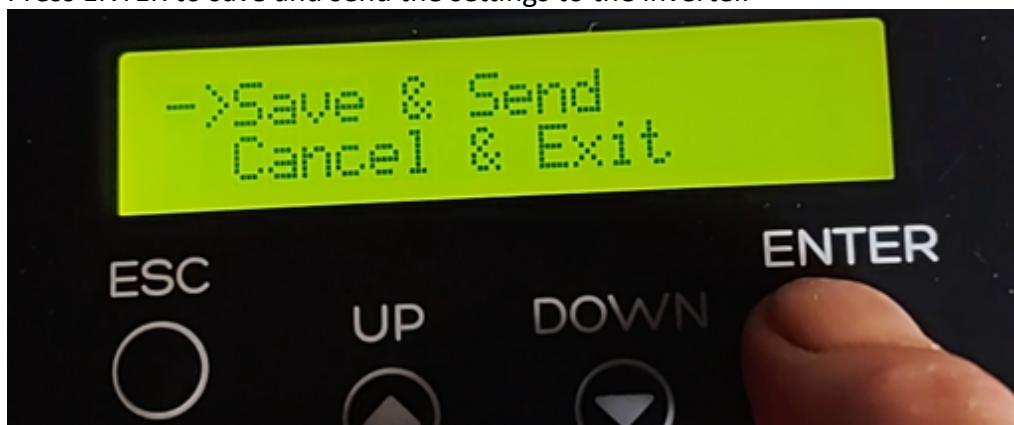

Press ESC until you reach the top level menu and choose Information to view the status of the inverter inputs and verify the correct voltage is being used.

Hugh Piggott February 2026